

Primerdesign™ Ltd

# Porcine epidemic diarrhoea virus

Membrane glycoprotein (M) gene  
genesig® Standard Kit

150 tests

G E N E S I G

Kits by Primerdesign

For general laboratory and research use only

# Introduction to Porcine epidemic diarrhoea virus

Porcine epidemic diarrhea virus (PED virus or PEDV) is a coronavirus that infects the cells lining the small intestine of a pig, causing porcine epidemic diarrhoea, a condition of severe diarrhea and dehydration.

Older animals mostly get sick and lose weight after being infected, whereas newborn piglets usually die within five days of contracting the virus. PEDV cannot be transmitted to humans, nor contaminate the human food supply.

First discovered in Europe, PEDV has become increasingly problematic in Asian countries. It has also spread to North America: it was discovered in the United States on May 5, 2013 and in Canada in the winter of 2014.

PEDV has a substantial economic burden given that it is highly infectious, resulting in significant morbidity and mortality in piglets

The sequence of the entire genome (of strain CV777) is 28,033 nucleotides in length, excluding the poly A-tail. Analysis of the nucleotide sequences revealed a small open reading frame (ORF) located near the 5' end (nt 99–137), and two large, slightly overlapping ORFs, ORF1a (nt 297–12650) and ORF1b (nt 12605–20641). The ORF1a and ORF1b sequences overlapped at a potential ribosomal frame shift site.

Comparative amino acid sequence alignments revealed that PEDV is most closely related to human coronavirus (HCoV)-229E and transmissible gastroenteritis virus (TGEV) and less related to murine hepatitis virus (MHV) and infectious bronchitis virus (IBV).

Porcine epidemic diarrhoea is the illness caused by PEDV. The virus damages the villi in the gut thus reducing the absorptive surface, with loss of fluid and dehydration. After introduction of the virus into a susceptible breeding herd, a strong immunity develops over two to three weeks. The colostral immunity then protects the piglets.

Acute outbreaks of diarrhoea occur when the virus is first introduced into a susceptible population. In such cases all sows may be affected, showing a mild to very watery diarrhoea. The incubation period is approximately 2 days and diarrhoea lasts for 7 to 14 days. In sucking pigs the disease can be mild or severe with mortalities up to 40%.

This is based on the history, clinical signs and examination of faeces samples for evidence of porcine epidemic diarrhoea virus by ELISA tests, Real-Time PCR or electron microscopy. Real-Time PCR is the fastest and most accurate method of testing. Post-mortem examination of dead pigs and laboratory tests on the small intestine may be necessary to confirm the diagnosis.

# Specificity

The Primerdesign genesig Kit for Porcine epidemic diarrhoea virus (PEDV) genomes is designed for the in vitro quantification of PEDV genomes. The kit is designed to have a broad detection profile. Specifically, the primers represent 100% homology with over 95% of the NCBI database reference sequences available at the time of design.

The dynamics of genetic variation means that new sequence information may become available after the initial design. Primerdesign periodically reviews the detection profiles of our kits and when required releases new versions.

If you require further information, or have a specific question about the detection profile of this kit then please send an e.mail to [enquiry@primerdesign.co.uk](mailto:enquiry@primerdesign.co.uk) and our bioinformatics team will answer your question.

# Kit contents

- **PEDV specific primer/probe mix (150 reactions BROWN)**  
FAM labelled
- **PEDV positive control template (for Standard curve RED)**
- **RNase/DNase free water (WHITE)**  
for resuspension of primer/probe mixes
- **Template preparation buffer (YELLOW)**  
for resuspension of positive control template and standard curve preparation

## Reagents and equipment to be supplied by the user

### Real-time PCR Instrument

### Extraction kit

This kit is recommended for use with genesig Easy DNA/RNA Extraction kit. However, it is designed to work well with all processes that yield high quality RNA and DNA with minimal PCR inhibitors.

### oasisig™ lyophilised OneStep or Precision®PLUS OneStep 2X RT-qPCR Master Mix

Contains complete OneStep RT-qPCR master mix

### Pipettors and Tips

### Vortex and centrifuge

### Thin walled 1.5 ml PCR reaction tubes

## Kit storage and stability

This kit is stable at room temperature but should be stored at -20°C on arrival. Once the lyophilised components have been resuspended they should not be exposed to temperatures above -20°C for longer than 30 minutes at a time and unnecessary repeated freeze/thawing should be avoided. The kit is stable for six months from the date of resuspension under these circumstances.

If a standard curve dilution series is prepared this can be stored frozen for an extended period. If you see any degradation in this serial dilution a fresh standard curve can be prepared from the positive control.

Primerdesign does not recommend using the kit after the expiry date stated on the pack.

## Suitable sample material

All kinds of sample material suited for PCR amplification can be used. Please ensure the samples are suitable in terms of purity, concentration, and RNA/DNA integrity. Always run at least one negative control with the samples. To prepare a negative-control, replace the template RNA sample with RNase/DNase free water.

## Dynamic range of test

Under optimal PCR conditions genesig PEDV detection kits have very high priming efficiencies of >95% and can detect less than 100 copies of target template.

## Notices and disclaimers

This product is developed, designed and sold for research purposes only. It is not intended for human diagnostic or drug purposes or to be administered to humans unless clearly expressed for that purpose by the Food and Drug Administration in the USA or the appropriate regulatory authorities in the country of use. During the warranty period Primerdesign genesig detection kits allow precise and reproducible data recovery combined with excellent sensitivity. For data obtained by violation to the general GLP guidelines and the manufacturer's recommendations the right to claim under guarantee is expired. PCR is a proprietary technology covered by several US and foreign patents. These patents are owned by Roche Molecular Systems Inc. and have been sub-licensed by PE Corporation in certain fields. Depending on your specific application you may need a license from Roche or PE to practice PCR. Additional information on purchasing licenses to practice the PCR process may be obtained by contacting the Director of Licensing at Roche Molecular Systems, 1145 Atlantic Avenue, Alameda, CA 94501 or Applied Biosystems business group of the Applera Corporation, 850 Lincoln Centre Drive, Foster City, CA 94404. In addition, the 5' nuclease assay and other homogeneous amplification methods used in connection with the PCR process may be covered by U.S. Patents 5,210,015 and 5,487,972, owned by Roche Molecular Systems, Inc, and by U.S. Patent 5,538,848, owned by The Perkin-Elmer Corporation.

## Trademarks

Primerdesign™ is a trademark of Primerdesign Ltd.

genesig® is a registered trademark of Primerdesign Ltd.

The PCR process is covered by US Patents 4,683,195, and 4,683,202 and foreign equivalents owned by Hoffmann-La Roche AG. BI, ABI PRISM® GeneAmp® and MicroAmp® are registered trademarks of the Applera Genomics (Applied Biosystems Corporation). BIOMEK® is a registered trademark of Beckman Instruments, Inc.; iCycler™ is a registered trademark of Bio-Rad Laboratories, Rotor-Gene is a trademark of Corbett Research. LightCycler™ is a registered trademark of the Idaho Technology Inc. GeneAmp®, TaqMan® and AmpliTaqGold® are registered trademarks of Roche Molecular Systems, Inc., The purchase of the Primerdesign™ reagents cannot be construed as an authorization or implicit license to practice PCR under any patents held by Hoffmann-LaRoche Inc.

# Principles of the test

## Real-time PCR

A PEDV specific primer and probe mix is provided and this can be detected through the FAM channel.

The primer and probe mix provided exploits the so-called TaqMan® principle. During PCR amplification, forward and reverse primers hybridize to the PEDV cDNA. A fluorogenic probe is included in the same reaction mixture which consists of a DNA probe labeled with a 5'-dye and a 3'-quencher. During PCR amplification, the probe is cleaved and the reporter dye and quencher are separated. The resulting increase in fluorescence can be detected on a range of qPCR platforms.

## Positive control

For copy number determination and as a positive control for the PCR set up, the kit contains a positive control template. This can be used to generate a standard curve of PEDV copy number / Cq value. Alternatively the positive control can be used at a single dilution where full quantitative analysis of the samples is not required. Each time the kit is used, at least one positive control reaction must be included in the run. A positive result indicates that the primers and probes for detecting the target PEDV gene worked properly in that particular experimental scenario. If a negative result is obtained the test results are invalid and must be repeated. Care should be taken to ensure that the positive control does not contaminate any other kit component which would lead to false-positive results. This can be achieved by handling this component in a Post PCR environment. Care should also be taken to avoid cross-contamination of other samples when adding the positive control to the run. This can be avoided by sealing all other samples and negative controls before pipetting the positive control into the positive control well.

## Negative control

To validate any positive findings a negative control reaction should be included every time the kit is used. For this reaction the RNase/DNase free water should be used instead of template. A negative result indicates that the reagents have not become contaminated while setting up the run.

# Resuspension protocol

To minimize the risk of contamination with foreign DNA, we recommend that all pipetting be performed in a PCR clean environment. Ideally this would be a designated PCR lab or PCR cabinet. Filter tips are recommended for all pipetting steps.

## 1. Pulse-spin each tube in a centrifuge before opening.

This will ensure lyophilised primer and probe mix is in the base of the tube and is not spilt upon opening the tube.

## 2. Resuspend the kit components in the RNase/DNase free water supplied, according to the table below:

To ensure complete resuspension, vortex each tube thoroughly.

Component - resuspend in water	Volume
<b>Pre-PCR pack</b>	
PEDV primer/probe mix (BROWN)	165 µl

## 3. Resuspend the positive control template in the template preparation buffer supplied, according to the table below:

To ensure complete resuspension, vortex the tube thoroughly.

Component - resuspend in template preparation buffer	Volume
<b>Post-PCR heat-sealed foil</b>	
PEDV Positive Control Template (RED) *	500 µl

\* This component contains high copy number template and is a VERY significant contamination risk. It must be opened and handled in a separate laboratory environment, away from the other components.

# OneStep RT-qPCR detection protocol

A OneStep approach combining the reverse transcription and amplification in a single closed tube is the preferred method. If, however, a two step approach is required see page 10.

## For optimum performance and sensitivity.

All pipetting steps and experimental plate set up should be performed on ice. After the plate is poured proceed immediately to the OneStep amplification protocol. Prolonged incubation of reaction mixes at room temperature can lead to PCR artifacts that reduce the sensitivity of detection.

### 1. For each RNA sample prepare a reaction mix according to the table below:

Include sufficient reactions for positive and negative controls.

Component	Volume
oasis OneStep or PrecisionPLUS OneStep 2X RT-qPCR Master Mix	10 µl
PEDV primer/probe mix (BROWN)	1 µl
RNase/DNase free water (WHITE)	4 µl
<b>Final Volume</b>	<b>15 µl</b>

### 2. Pipette 15µl of this mix into each well according to your qPCR experimental plate set up.

### 3. Pipette 5µl of RNA template into each well, according to your experimental plate set up.

For negative control wells use 5µl of RNase/DNase free water. The final volume in each well is 20µl.

### 4. If a standard curve is included for quantitative analysis prepare a reaction mix according to the table below:

Component	Volume
oasis OneStep or PrecisionPLUS OneStep 2X RT-qPCR Master Mix	10 µl
PEDV primer/probe mix (BROWN)	1 µl
RNase/DNase free water (WHITE)	4 µl
<b>Final Volume</b>	<b>15 µl</b>

## 5. Preparation of standard curve dilution series

- 1) Pipette 90 $\mu$ l of template preparation buffer into 5 tubes and label 2-6
- 2) Pipette 10 $\mu$ l of Positive Control Template (**RED**) into tube 2
- 3) Vortex thoroughly
- 4) Change pipette tip and pipette 10 $\mu$ l from tube 2 into tube 3
- 5) Vortex thoroughly

Repeat steps 4 and 5 to complete the dilution series

Standard Curve	Copy Number
Tube 1 Positive control ( <b>RED</b> )	$2 \times 10^5$ per $\mu$ l
Tube 2	$2 \times 10^4$ per $\mu$ l
Tube 3	$2 \times 10^3$ per $\mu$ l
Tube 4	$2 \times 10^2$ per $\mu$ l
Tube 5	20 per $\mu$ l
Tube 6	2 per $\mu$ l

## 6. Pipette 5 $\mu$ l of standard template into each well for the standard curve according to your plate set up

The final volume in each well is 20 $\mu$ l.

## OneStep RT-qPCR amplification protocol

Amplification conditions using oasis OneStep or PrecisionPLUS OneStep 2X RT-qPCR Master Mix.

	Step	Time	Temp
	Reverse Transcription	10 min	55 °C
	Enzyme activation	2 min	95 °C
Cycling x50	Denaturation	10 s	95 °C
	<b>DATA COLLECTION *</b>	60 s	60 °C


\* Fluorogenic data should be collected during this step through the FAM channel

# Interpretation of results


Target	Positive control	Negative control	Interpretation
+	+	-	<b>POSITIVE QUANTITATIVE RESULT</b> calculate copy number
-	+	-	<b>NEGATIVE RESULT</b>
+ / -	+	$\leq 35$	<b>EXPERIMENT FAILED</b> due to test contamination
+ / -	+	$> 35$	*
+ / -	-	+ / -	<b>EXPERIMENT FAILED</b>

Positive control template (RED) is expected to amplify between Cq 16 and 23. Failure to satisfy this quality control criterion is a strong indication that the experiment has been compromised

\*Where the test sample is positive and the negative control is positive with a Cq > 35, the sample must be reinterpreted based on the relative signal strength of the two results:

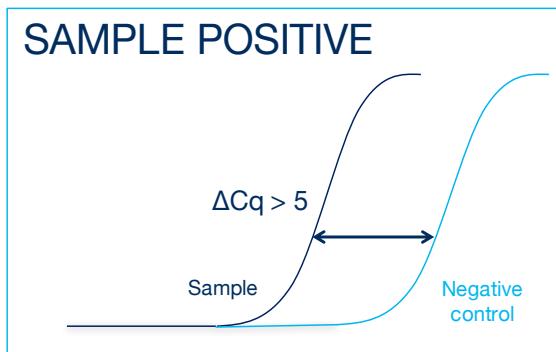

If the sample amplifies > 5 Cq earlier than the negative control then the sample should be reinterpreted (via the table above) with the negative control verified as negative.

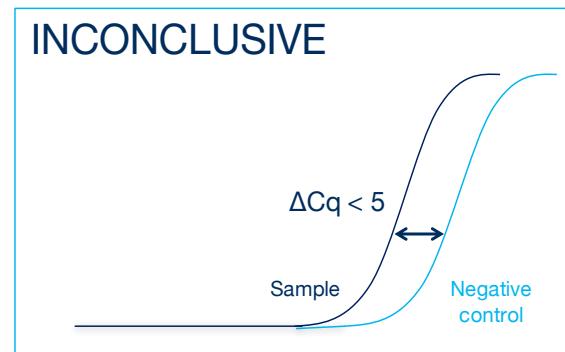

If the sample amplifies < 5 Cq earlier than the negative control then the positive sample result is invalidated and the result should be determined inconclusive due to test contamination. The test for this sample should be repeated.